Terminator™ ZP


INSTALLATION PROCEDURES




 Mount junction box base on expediter. Make sure to align slots to properly orient junction box base. Tighten nut securely.




 For power connection applications: Install power connection fittings (user supplied) and pull in power and ground wires.

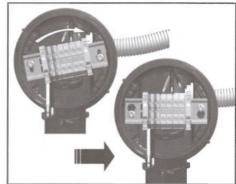


12. Install quick mount terminal blocks.

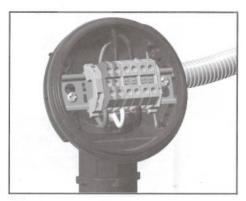


13. Complete system wiring. Refer to typical wiring details on page 5.

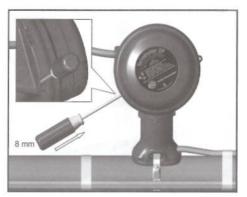

14. Install junction box lid and twist hand tight. Insert screwdriver into ratchet slots located on side of junction box base.

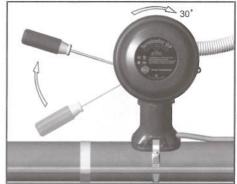

15. Use screwdriver to ratchet on junction box lid. Lid will rotate 30 degrees.

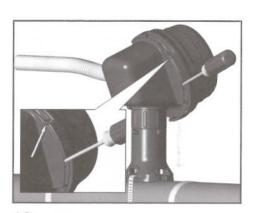

16. Lid latch mechanism fully engaged. To remove lid, repeat steps 14 and 15 but in the opposite direction.