



# Terminator™ ZP

## INSTALLATION PROCEDURES

### Two Cable Layout Tips

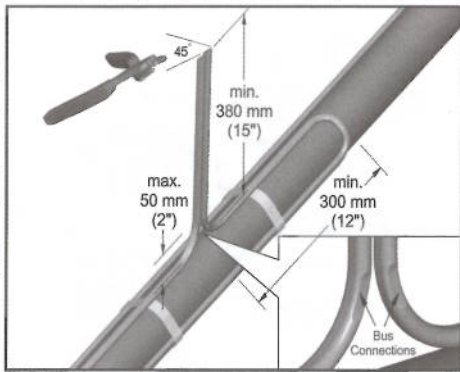


Locate bus connection (HPT and FP only) and cable as shown. Cut end of cable at angle to aid in piercing grommet. Leave additional cable for expansion loop.

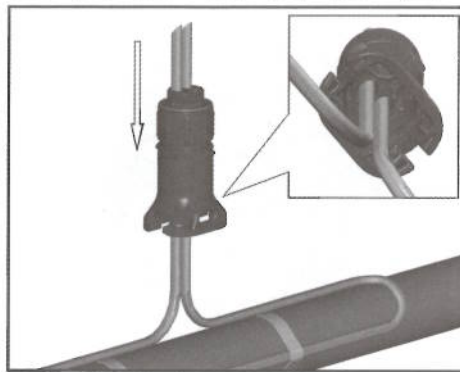


Insert two cables into expediter.


### Three Cable Layout Tips

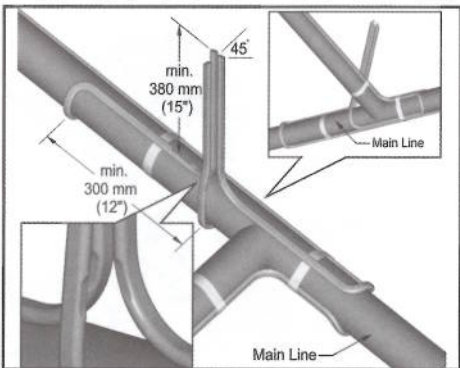

Locate bus connection (HPT and FP only) and cable as shown. Cut end of cable at angle to aid in piercing grommet. Leave additional cable for expansion loop.

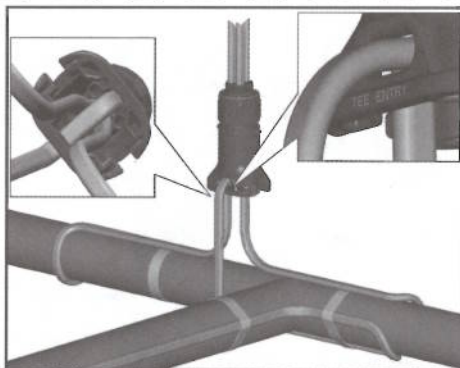


Insert three cables into expediter.

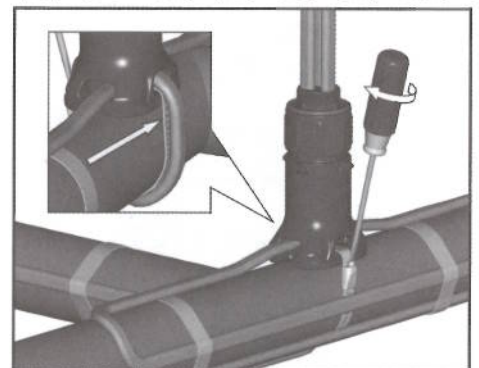


Mount expediter with three cables. Do not band over cable.


### Typical Wiring Details

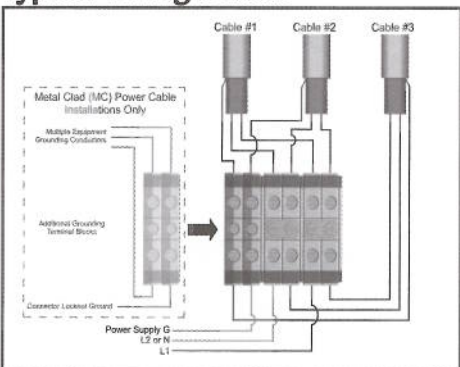

Power Connection (1 to 3 Cables). For 3 cable power connections, additional terminal blocks will be required when using 10mm² (#8 AWG) power supply wiring.

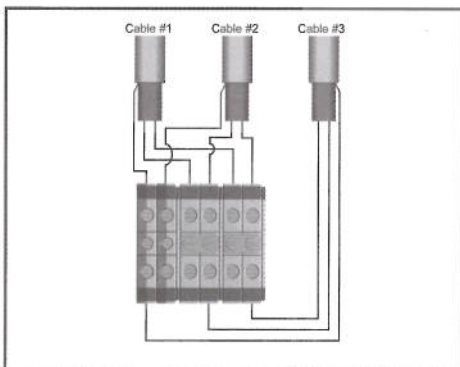

In-Line Splice and T-Splice

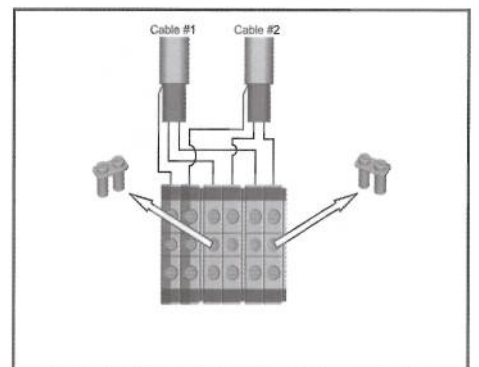

End Termination (1 to 2 Heating Cables) Remove jumpers for 2 cable terminations.